

# N1548 交换机配置 (admin)

1. 配置 AAA 认证 (用户名 admin / 密码 adminpass 验证)

```
test_sw(config)#username admin password adminpass privilege 15

test_sw(config)#aaa authentication login default local

test_sw(config)#aaa authentication login default line

test_sw(config)#aaa authentication enable default line

Q07-L2-1(config)#enable password adminpass
```

2. 配置控制台登录验证

```
test_sw(config)#line console

test_sw(config-line)#login authentication default

test_sw(config-line)#enable authentication default

test_sw(config-line)#password adminpass

test_sw(config-line)#exit
```

3. 配置 Telnet 登录验证

```
test_sw(config)#line telnet

test_sw(config-telnet)#login authentication default

test_sw(config-telnet)#enable authentication default

test_sw(config-telnet)#password adminpass
```

```
test_sw(config-telnet)#exit
```

---

Revision #1

Created 4 August 2022 04:41:48 by artop0420

Updated 4 August 2022 04:44:35 by artop0420